


Assembly Instructions Hudson




HUDSON

W 640 D 560 H 1620 MM
W 25 D 22 H 63.5 INCH



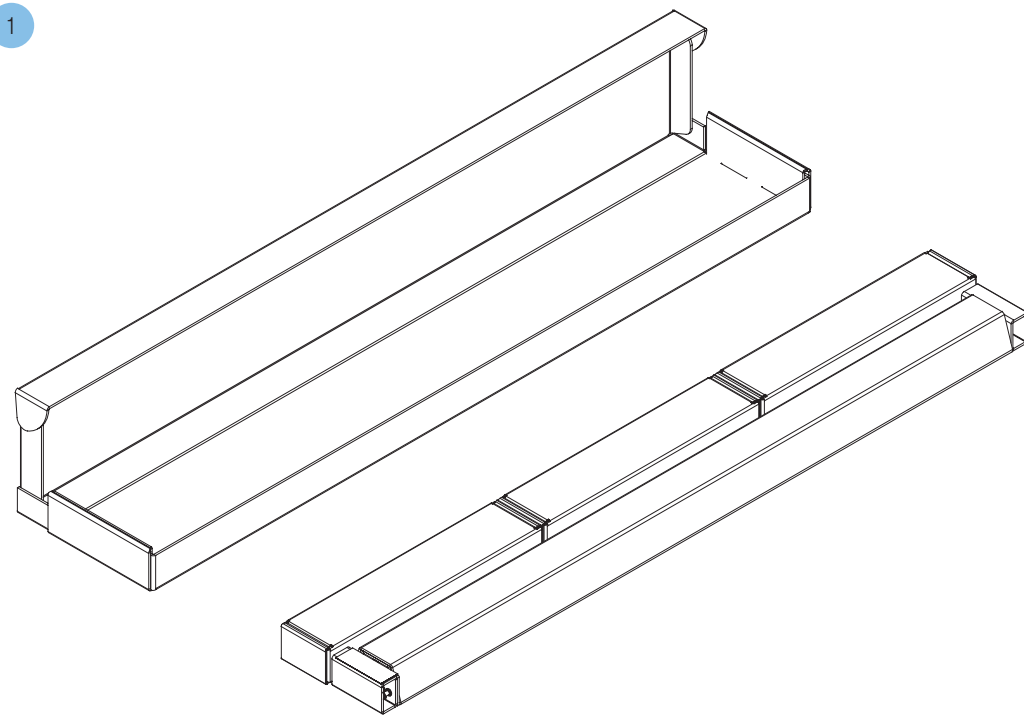

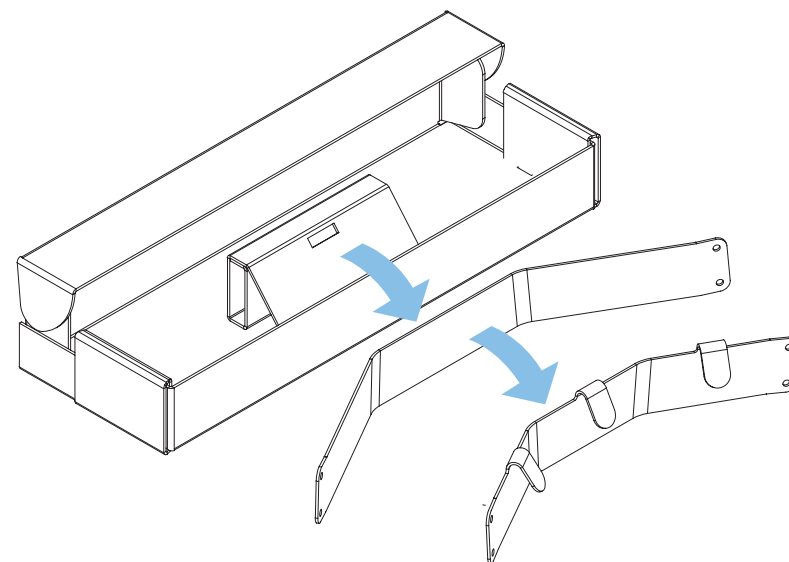

1




2




A cordless drill can be used to connect all the fixings in place but they must be finished off by fully tightening with a hand tool.

		
	X12	X12
		
	X12	X12
HEX4KEY (INCLUDED)		


3

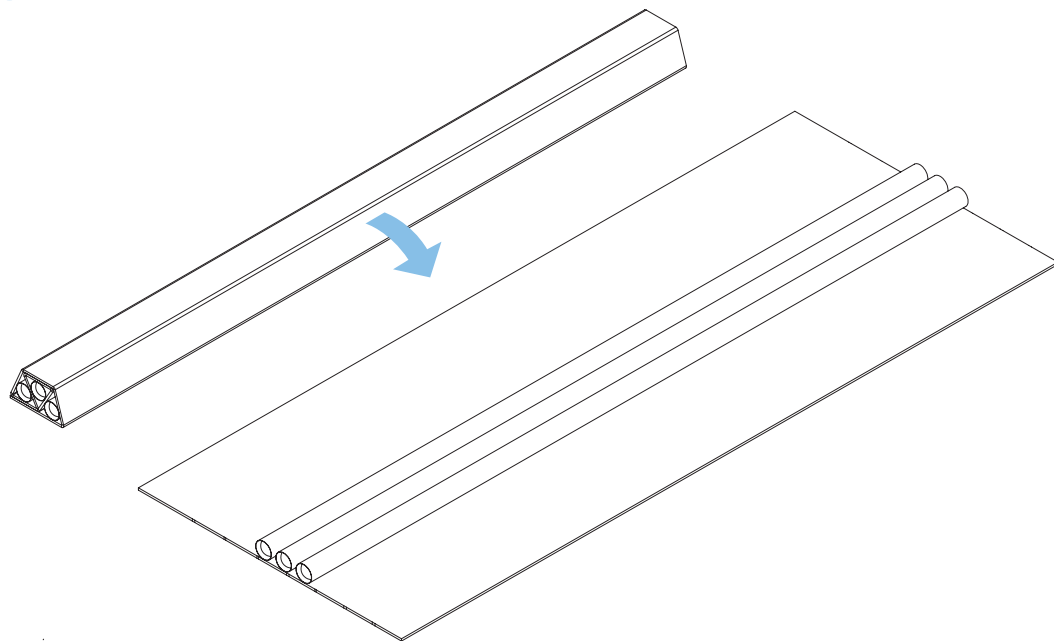



5

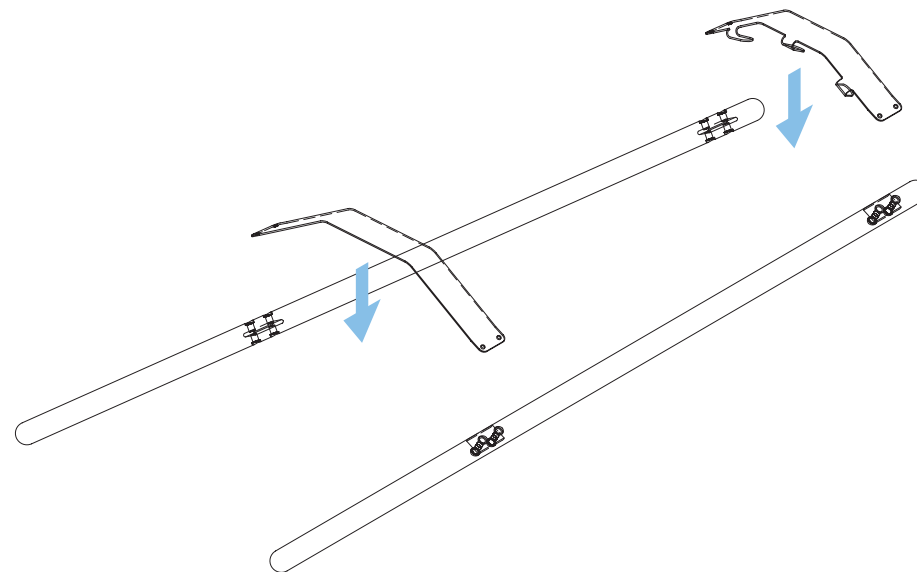



4

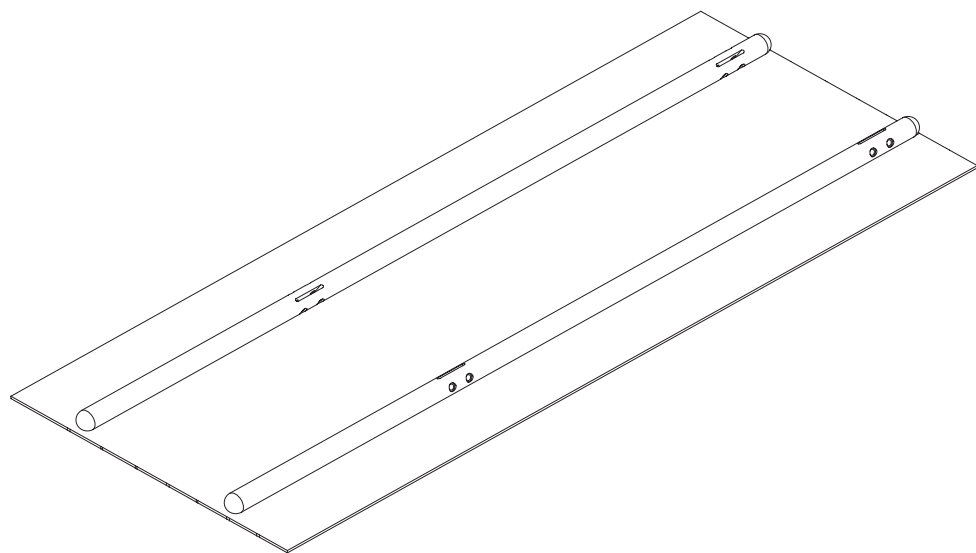



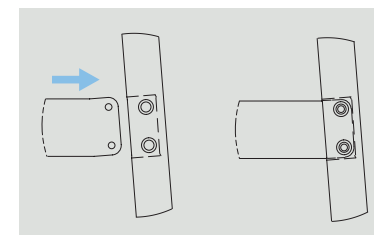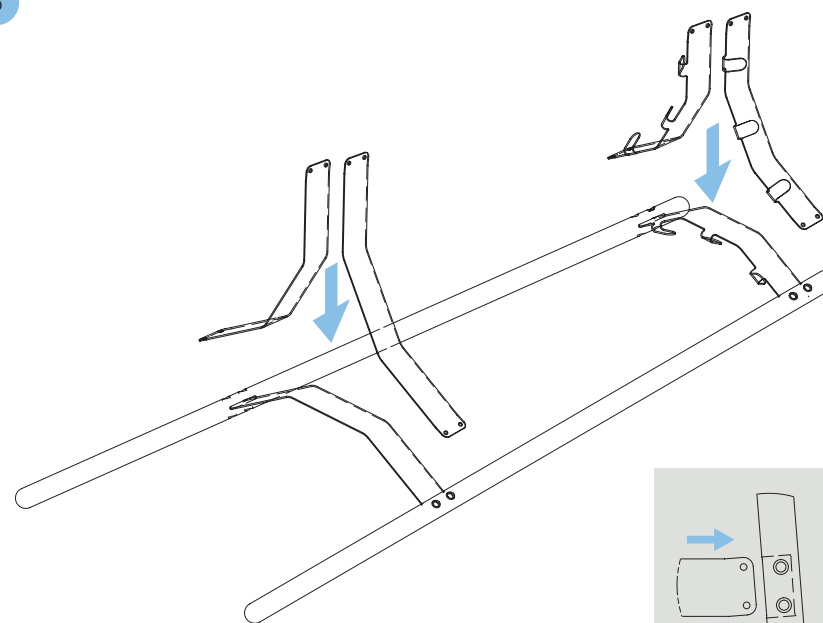

6

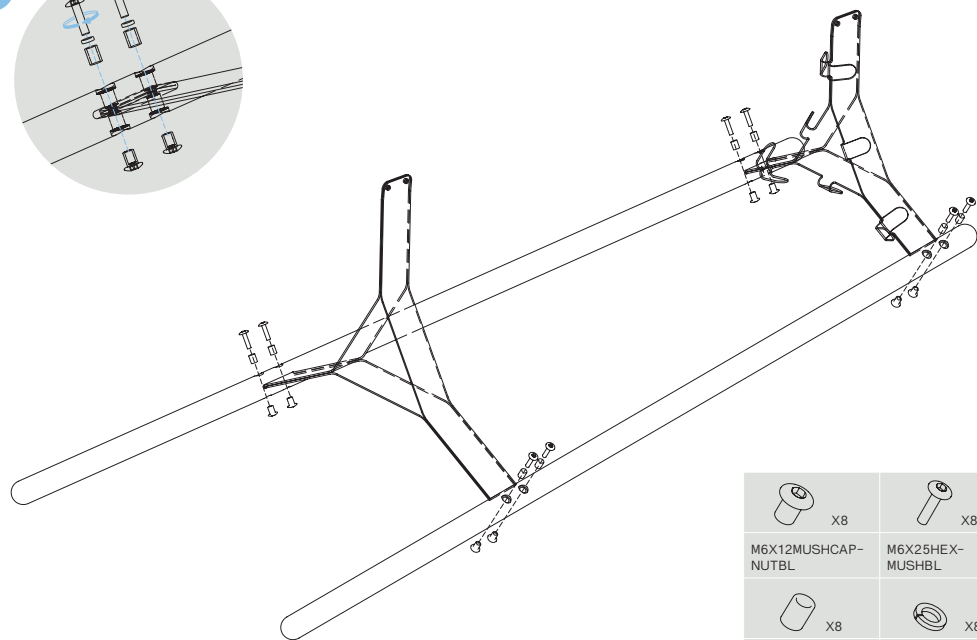
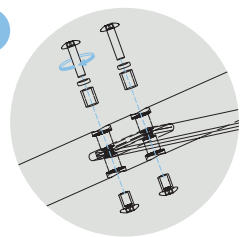






7

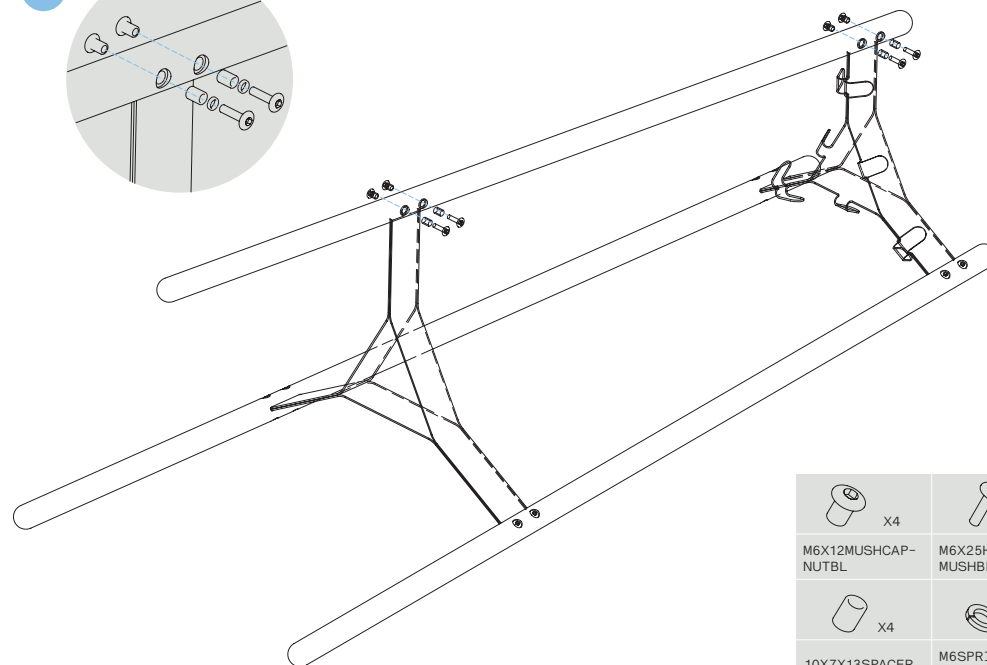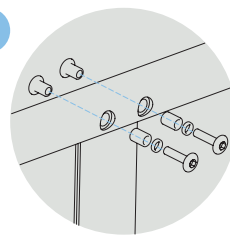


 X8	 X8
 X8	 X8

9



 X4	 X4
 X4	 X4

8

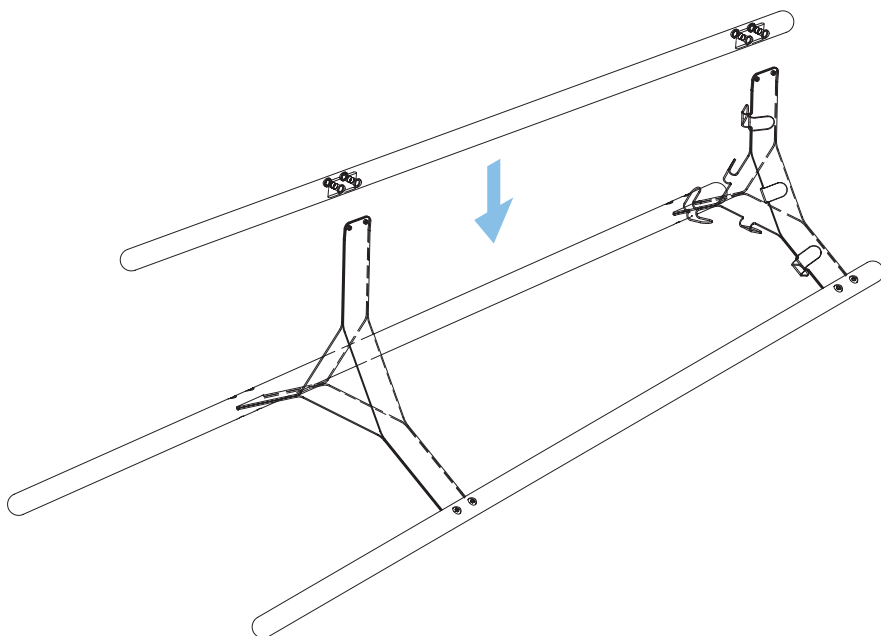

10

